


Installation manual RC-CONTROL

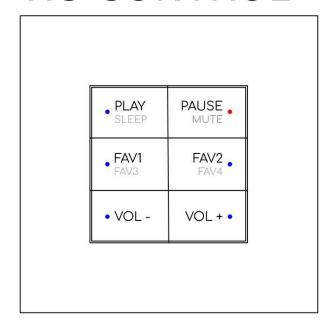

Basic functions:


- wall controller for the LinkPlay audio multiroom system
- turning on and o the zone (when turned on, it starts the last played music)
- direct recall of controlled device presets (1 to 4)
- calling AUX input (configurable)
- zone volume control including mute
- 3 step setting options for volume (short and long press)
- control via TCP/IP protocol (WIFI)
- feedback on buttons PLAY/STOP and MUTE
- simple web interface for the controller setup

Description of buttons:

Button	Short press	Long press (2 sec)
PLAY/SLEEP	starting the last played music	call local input
PAUSE/MUTE	stop playback (zone o)	muting the sound in the zone
FAV1/FAV3	recall preset 1	recall preset 3
FAV2/FAV4	recall preset 2	recall preset 4
VOL +	turn up the volume in the zone	turn up the volume in the zone
VOL -	turn down the volume in the zone	turn down the volume in the zone

Controller Setup:


1. Connecting to an existing WIFI network

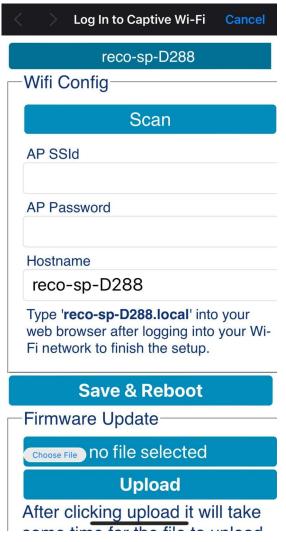

- 1.1 After connecting the power supply, the PLAY and STOP lights on the controller flash at the same time (the controller is in AP mode)
- 1.2 Connect your phone or computer to the "reco-sp-XXXX" WIFI network (XXXX is the last 4 numbers from the MAC address)
- 1.3 After connecting to the WIFI, it will automatically open the login window for wifi logins (Picture 1). If the window does not open automatically, enter the address 192.168.4.1 in the browser
- 1.4 Note the name of the wifi SSID (reco-sp-XXXX) or hostname after login to the controller. It will be used in the next step.
- 1.5 Type your ssid and password of your private wifi network (you can write directly or find available networks by SCAN button.
- 1.6 After filling, press the SAVE & REBOOT button. The controller will restart and will try to connect to your private WIFI network. If the controller connects to your network

successfully, the PLAY button LED will flash green every 3 seconds.

2. Setup the controller with existing LinkPlay device:

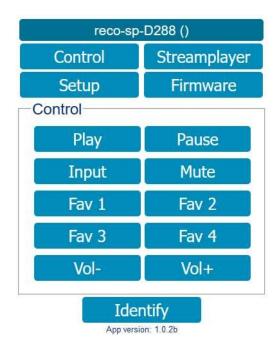

- 2.1 Type "reco-sp-XXXX.local" in your internet browser (reco-sp-XXXX is the hostname of the controller in the first setup).
- 2.2 You will get the main page (picture 2)
- 2.3 Go to the STREAMPLAYER page


Notes

You can use this web interface also for controlling selected LinkPlay players with basic functions..

Button "Identify" is useful when you have several controllers on the network to find the proper controller.



- 2.4 Press the "Discovery" button to find all LinkPlay players on the network.
- 2.5 After finding all players click on the player you want to control. After this step, you will see which player is connected to the controller.
- 2.6 Select desired VOLUME STEPS and start volume if needed. Then press the "SAVE" button again to store all settings.
- 2.7 Select desired local input for assign to AUX button. Then press the "SAVE" button again to store all settings.
- 2.8 Now the controller operates with the selected LinkPlay player.

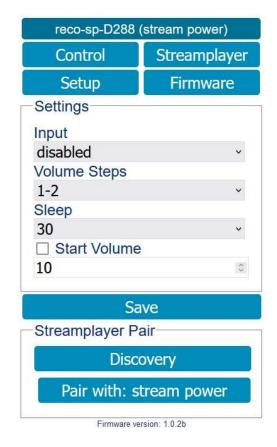



3. Other settings



- 3.1 Go to the SETUP page
- 3.2 You can set ADMIN login and password to prevent incorrect settings. Default password is empty.
- 3.3 You can set LED brightness in the three steps LOW / MID / HIGH

Notes:

On this page you can find the IP address and MAC address of the controller. You can change hostname to preferred name (for example reco-kitchen).

Uploading new firmware:



- 3.4 Go to the FIRMWARE page
- 3.5 You can upload new firmware for the controller.
- 3.6 You can make a factory reset here to revert all controller settings.

Notes:

You can perform FACTORY RESET by holding FAV1 a VOL+ buttons together for 8 seconds, then release.

Controller setup modes and errors



AP mode - in this mode it is possible to connect to the controller WIFI and log in to the existing WIFI network Every 3 seconds, PLAY and STOP flash at the same time

Call AP mode: hold STOP and VOL- for 5 seconds



AP mode - client connected
Web server IP adress "192.168.4.1"



The controller is not connected to the existing WIFI network

STOP button flashes every 3 seconds

**PLAY	STOP • MUTE
• FAV1 FAV3	FAV2 •
• VOL -	VOL+•

The controller is connected in to an existing WIFI network, but is not paired to any LinkPlay player
The green PLAY LED flashes every 3 seconds



The controller is connected in to WIFI network, but could not find a paired LinkPlay player FAV1 flashes every 3 seconds

Controller normal operation modes



The LinkPlay player does not play any music STOP button lights up



The LinkPlay player plays music from local input (optical in, line in, etc)
PLAY button lights up cyan



The BluOS player plays music from the network (internet radio, mp3...)

PLAY button lights up blue

**PLAY SLEEP	STOP •
• FAV1 FAV3	FAV2 •
• VOL -	VOL + •

The BluOS player plays music from airplay or spotify connect

PLAY button lights up green

**PLAY	STOP • MUTE
• FAV1 FAV3	FAV2 •
**VOL -	VOL 🔆

The BluOS player plays music, but the audio output is muted.

VOL- and VOL+ buttons light together

Specifications:

Power supply: 12V DC / 80mA


Communication: WIFI 2,4GHz


Installation: standard electrical installation box KU68

Design: NIKO Intense White (can be installed in NIKO multiframe)

Connection:

Back side of the controller

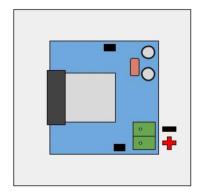

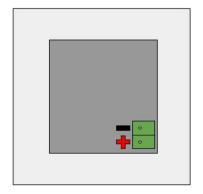

Use the supplied power connector for connection.